

GUIDE TO USING THE PROJECTOR

1. Connect the Laptop to the Projector with the 9 pin cable
2. Turn on projector & laptop
3. If the projector doesn't automatically detect the signal from laptop, send signal from laptop to projector. This will require pressing both the "Fn" also known as the function key and an F7 (just look for a picture of a monitor d on a "F" key on the top row of buttons)
4. Options for choice of projections should come up on the screen and you can choose from, projector only, dual/duplicate, laptop only, or continuous. The dual/duplicate setting is ideal for teaching.
5. Focus and adjust the picture size on the screen

e^lephas



www.elephas.com.hk

Extend Your Warranty For Free

Scan this QR code to like us on facebook, extend the warranty to 24 months AND get FREE samples of Elephas new arrival products.

Quick User Guide

EPR60 Mini Projector

Entertain your life



e^lephas

Contents

Contact Info

For any issues when using this projector, please contact us with your buyer's account, or email us directly to: service@elephas.com.hk

Scan the QR in the back page to like our Facebook page to get information of discount.

Elephas EPR60 Projector User Manua



Extend Your Warranty For Free

Scan this QR code to like us on facebook, extend the warranty to 24 months AND get FREE samples of Elephas new arrival products.



1.Connections

 
- | | | |
|-------------|--------------------|-----------------|
| 1. Lens | 2. Focusing Handle | 3. Keystone |
| 4. AC Input | 5. Power Button | 6. OK |
| 7. Right | 8. Left | 9. ESC - Return |



- | | |
|---------------------|-----------------------------|
| 10. Input Source | 11. Infrared Receiving Port |
| 12. VGA Port | 13. Headphone Jack |
| 14. AV Port | 15. USB Input |
| 16. USB Output (5V) | 17. HDMI Input |
| 18. SD Card Slot | 19. Indicator Light |

2.Remote Control

- | | | |
|------------------|-----------------|-------------|
| 1. Power Button | 2. Mute | 3. Menu |
| 4. Input Source | 5. Play/Pause | 6. Previous |
| 7. Fast Backward | 8. Fast Forward | 9. Next |
| 10. Up | | 11. Left |

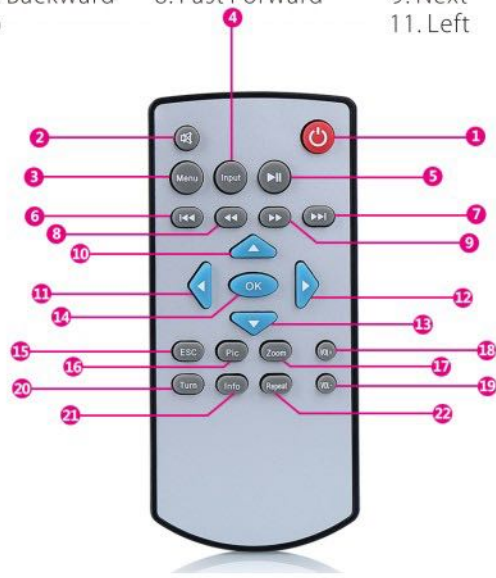

- | | | |
|------------------------|------------------------|--------|
| 12. Right | 13. Down | 14. OK |
| 15. ESC - Return | 16. Pic - Picture Mode | |
| 17. Zoom | 18. Volume + | |
| 19. Turn - Screen Turn | 20. Turn - Screen Turn | |
| 21. Info - Information | 22. Repeat | |

3. Operation

3.1 How to Switch on and off?

 
- 3.1.1 Connect the power adapter, the projector is under standby status with the indicator light on.
- 3.1.2 Switch on: Press the power button on the unit or the power button on the remote control once, then the projector is turned on.
- 3.1.3 Switch off: Press the power button on the unit or the power button on the remote control once, then the projector is turned off.



3.2 How to adjust clarity of image?

- 3.2.1 Place the projector vertical to the projection screen, and then adjust the focusing handle until it presents clear image.
- 3.2.2 Keystone Handle. Adjust the Keystone button to turn image into rectangular shape.
- 3.2.3 If you are connecting the projector with laptop or PC, please lower the PC/laptop display resolution to 800*600 or 1024*768 to get best result.
- 3.2.4 Please note that both the projection distance and image focus will affect the image quality.

For optimal use, please set the projection distance at 1.8 meters and get a 60 inch picture.

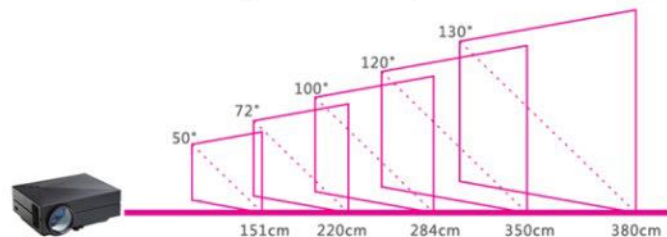

3.3 How to set the language?

- 3.3.1 Press " Menu " button on the remote control to enter menu page.



3.3.2 Press " Left " or " Right " button on the remote control to choose the sub menu.

3.3.3 Then choose " Option " - " OSD Language English " Language, press " ok " on projector or on the remote control to enter the language page.



 
3.3.4 Press " Left " or " Right " button to find the language you need, and then press " ok " on the unit on the remote control to confirm.



3.3.5 Press menu button on the projector or on the remote control to go back.

4. How to play Movie or Photo?

4.1 Compatible Devices

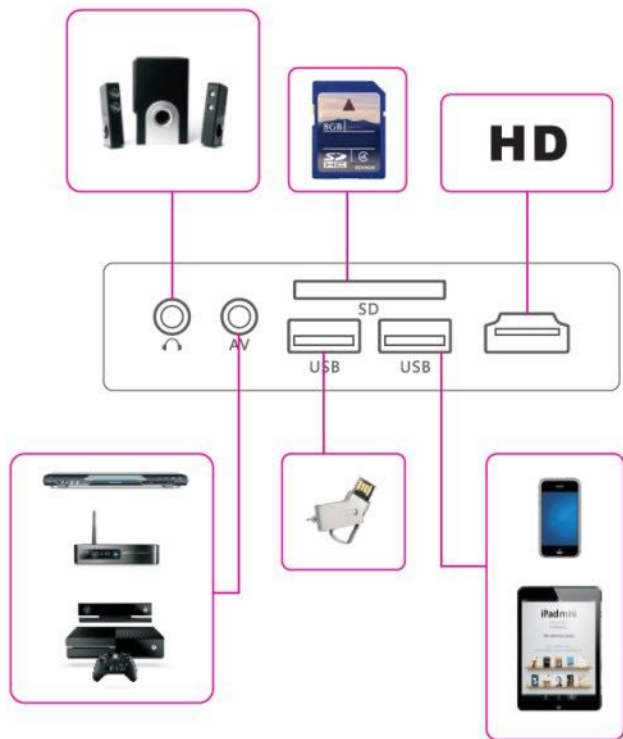


4.2 How to play multi-media files in USB drive & SD card?

Multimedia	Audio File	MP3/WMA/ASF/OGG/AAC/WAV
	Image File	JPEG/BMP/PNG
	Video File	3GP(H.263, MPEG4)/AVI(XVID, DIVX, H.264)/ MKV(XVID, H.264 DIVX)/ FLV(FLV1)/ MOV(H.264) /MP4(MPEG4, AVC)/ MPG(MPEG1)/ VOB(MPEG2)/ MPG(MPG-PS)/RMVB(RV40)/RM
	TXV File	TXT

4.2.1 Insert USB drive into USB Port or SD card into SD card slot.

 4.2.2 Press "Input" button to enter "Input Source" page, then press "Up" or "Down" button on remote control to choose the input source.

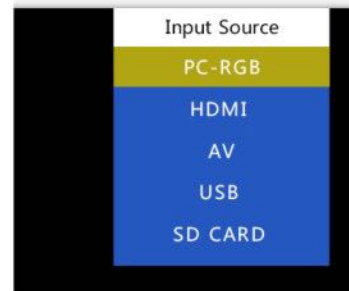

4.2.3 Press "ok" button on remote control to confirm the "Signal Source" you need.

4.2.4 Press "Left" or "Right" button to choose "Photo", "Music", "Film" or "Text". The press "ok" button to enter the file page.

4.2.5 Choose the file you want to play, and press "Play/Pause" button to play or pause the file.

 
4.2.6 Press "ESC" to get back.

5. How to connect with AV video device(TV/TV box, etc) ?

5.1 Supporting format: NTSC,PAL

5.2 Connect projector and AV video devices with 3 in 1 AV cables in the package

5.3 Choose Input Source as "AV" - Video

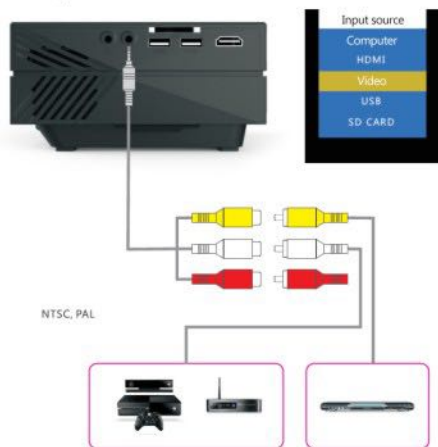

6. How to connect with HDMI devices (Laptop, PC) ?

6.1 Connect projector and device with HDMI cable.

6.2 Press "Input", and choose "HDMI" as input source.



6.3 Warm Tips:

Adjust the PC/laptop display resolution to 800*600 or 1024*768, which can provide the best clarity.

If the screen is black after connecting, please adjust your PC display resolution and choose the "Multiple display" as "Duplicate these displays". Please check screenshot blow:



Display: 1. MStar Demo

Resolution: 1024 × 768

Orientation: Landscape

Multiple displays: **Extend these displays**

- Extend these displays
- Show desktop only on 1
- Show desktop only on 2

Make this my main display

Make text and other...
What display settings should I choose?

OK



Display: 1. MStar Demo

Resolution: 1024 × 768

Orientation: High

Multiple displays: Make this my main display

Make text and other...
What display setting...

Resolution selection menu:

- 1920 × 1080 (Recommended)
- 1600 × 900
- 1280 × 720
- 1024 × 768

Low

OK

6.4 How to connect projector with iPad or iPhone/ Android phone with MHL function?

6.4.1 To connect projector with iPad, you will need a WIFI display dongle to connect them, and choose "HDMI" as "input source".

6.4.2 To connect projector with Phone, first of all, please confirm that your phone support MHL (Mobile High-Definition Link) function. Then you will need a WIFI display dongle or a MHL cable to connect phone and projector, and choose "HDMI" as "input source".

7. Trouble Shooting:

Troubles	Solution
No power	Please check whether the projector power adapter is plugged well, and whether the remote control battery is installed.
No Image or Sound	Please check whether the signal input interface (VGA / HDMI / AV / USB / SD Card) is seated properly, and check whether the source file is in good condition.

No Sound	Please check whether the signal input interface (VGA / HDMI / AV / USB / SD Card) is seated properly, check whether the volume is adjusted to the minimum position.
No Image	Please check whether the signal input interface (VGA / HDMI / AV / USB / SD Card) is seated properly, and check whether the brightness, contrast is adjusted at the minimum position.
Image blur	Please check whether the image focus is correct, check whether the projection distance is beyond the maximum range, and check the signal source file is in good condition.
Color Weak	Please check whether the color and color temperature adjustment is normal.
System Crash	Restart the projector after power off.
MHL Failure	Please make sure your phone support MHL-out function. (Many Android smart-phone do not support MHL function.)